




TRPB0770 1 1/4" Bottle Trap & Extension

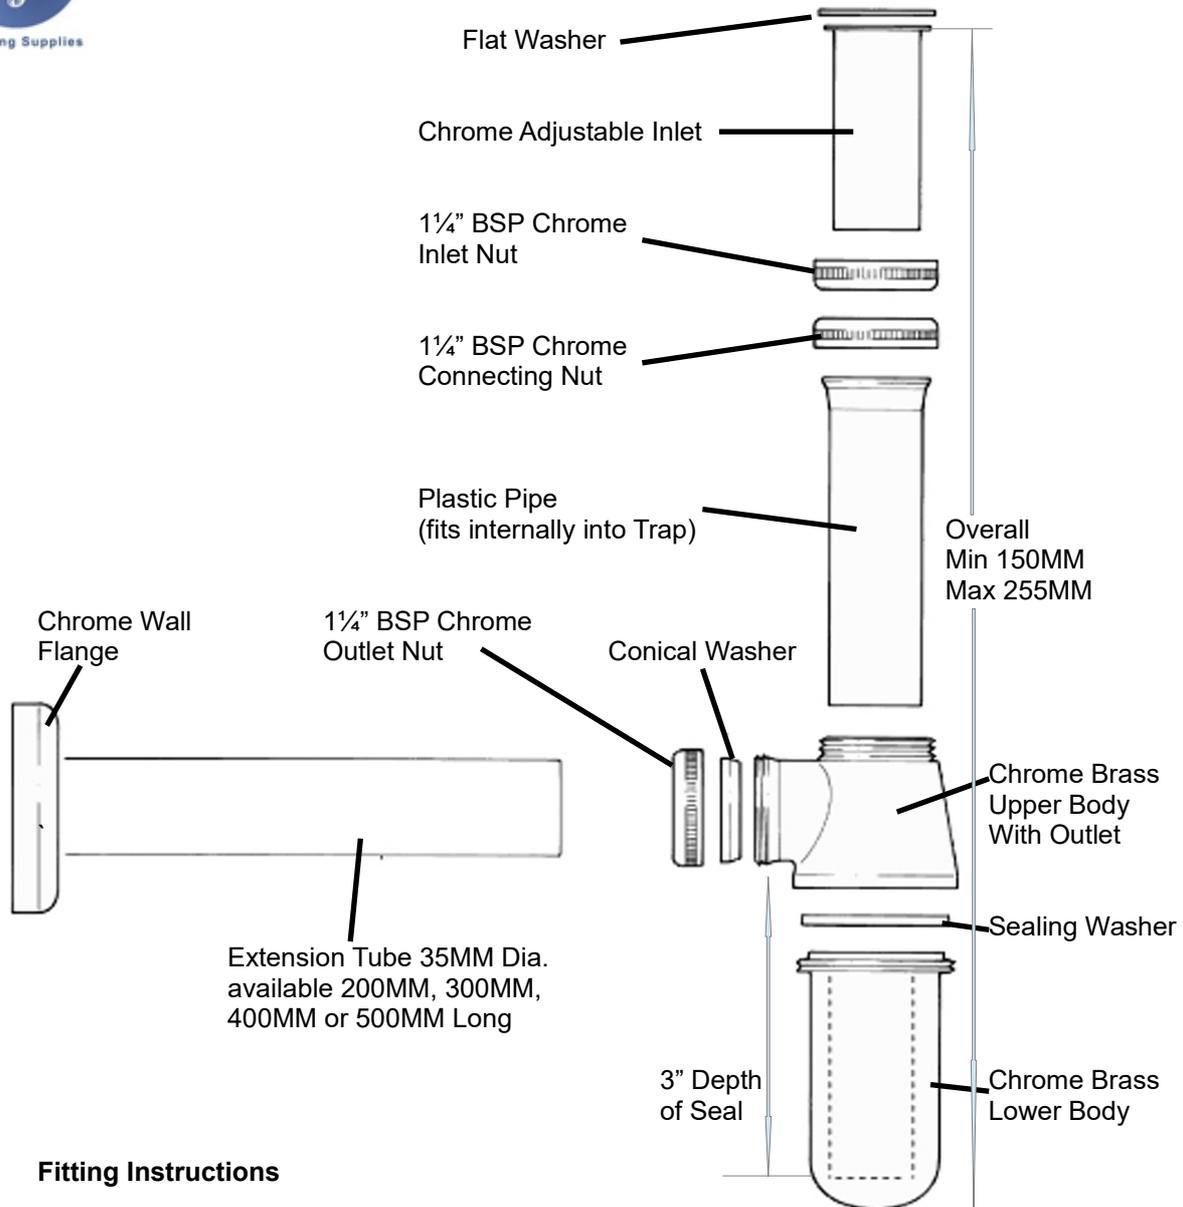

Fitting Instructions

- A) Check all components are present and fit/assemble as shown above.
- B) Fit the flat inlet washer into the chrome inlet nut and attach to the waste outlet tail.
- C) The height of the trap outlet can be varied by approx 105MM to line up with the position of the waste outlet pipe. This is achieved by loosening the chrome connecting nut which then allows the chrome adjustable inlet to move freely. After setting at the required height re-tighten the chrome nut.
- D) Remove the chrome outlet nut and conical washer and slide these onto the extension tube. Fit the extension tube fully into the upper trap body and tighten the outlet nut ensuring that the conical washer is correctly located.
- E) Fit the wall flange to the extension tube.
- F) The extension can be best connected to the plastic waste pipe with a 1 1/4" multifit plastic connector (compression type) - This is not supplied with this product.
- G) When all connections have been made and secured, check that all joints are watertight.